



F30N10/15 Dimensions (mm)

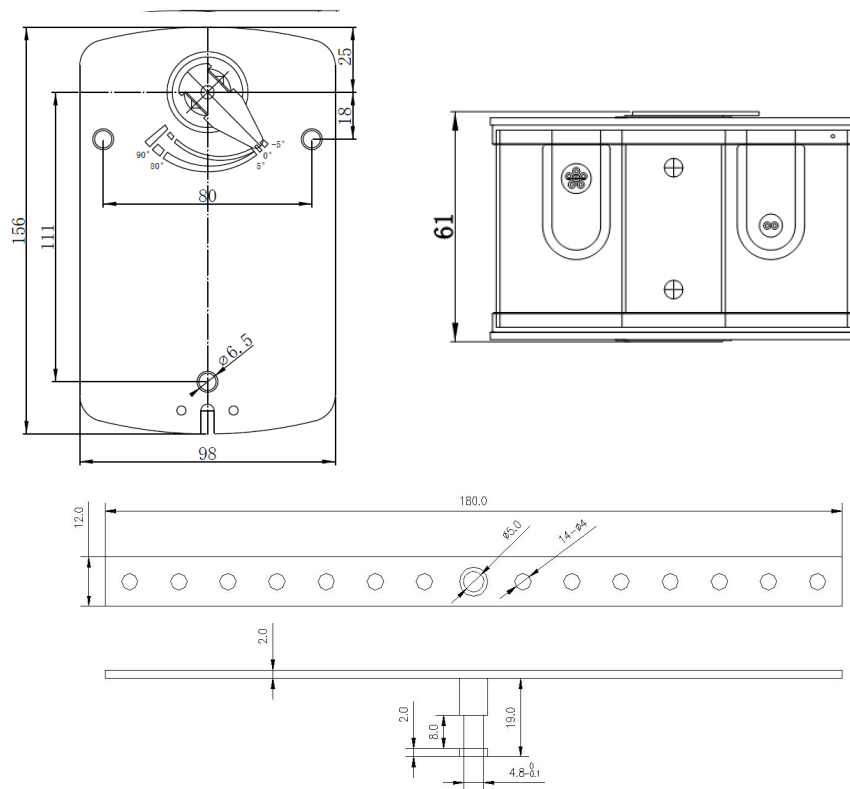


F30N30/40 Dimensions (mm)

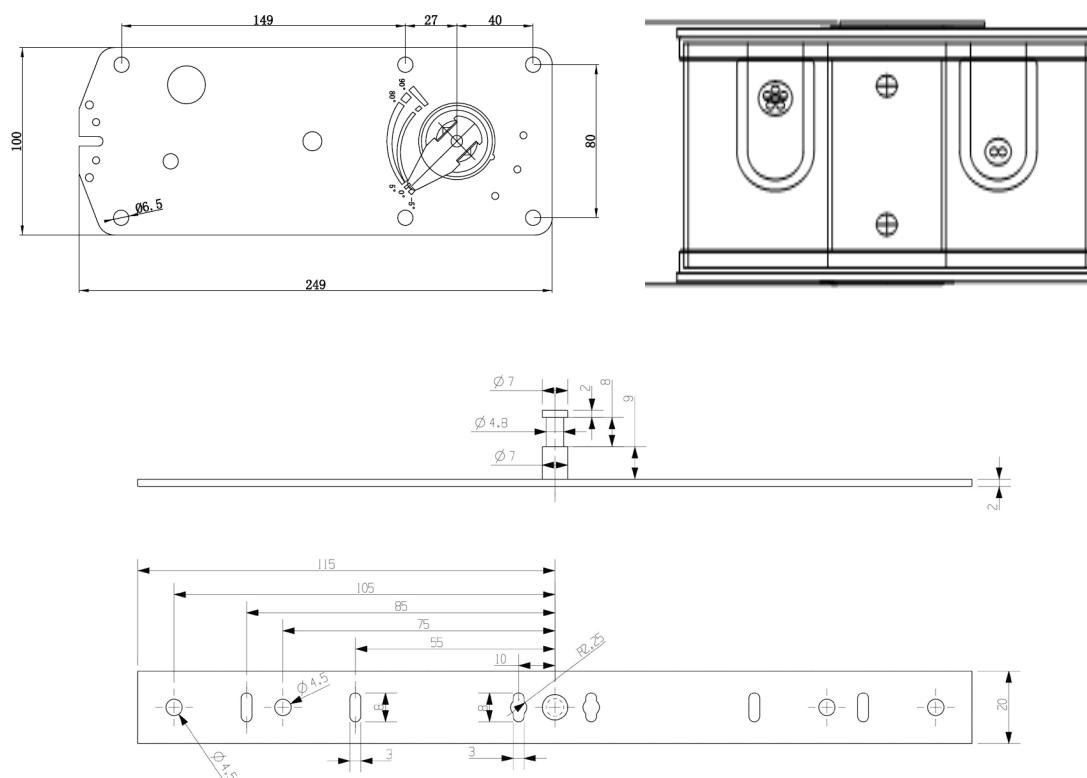


Wiring Instructions

2-point

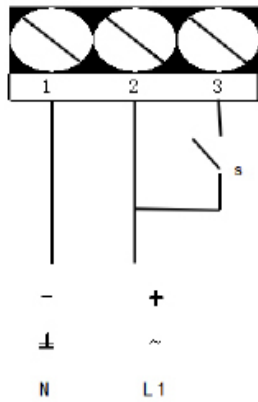


24VAC/DC±10%
230VAC±10%


3-point

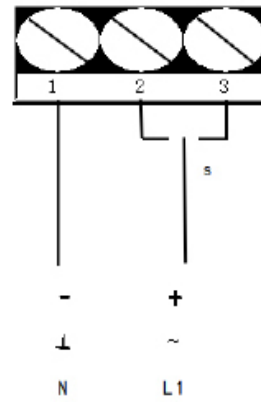

Auxiliary switches

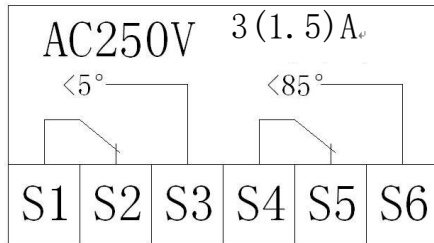

Manual Operation Instructions

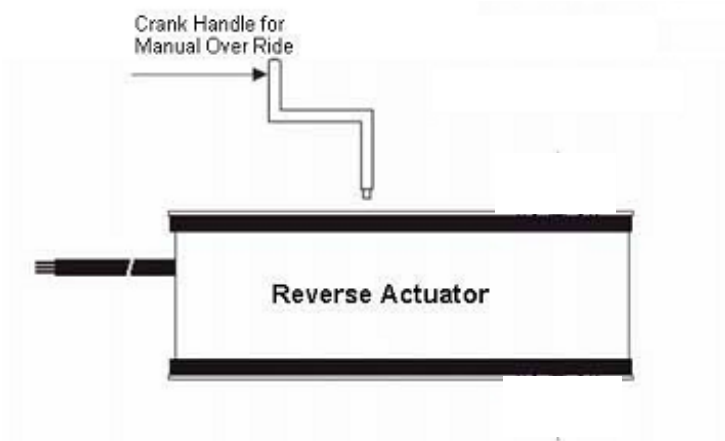

Insert the handle into the inner hexagonal hole and crank the handle evenly and slowly in the clockwise (or counterclockwise) direction as shown on the product mask. The output shaft will rotate clockwise (or counterclockwise) at the same time, so that the output shaft will rotate to the desired position.



Installation must be carried out by personnel who have received relevant training or work experience. During the installation process, be careful not to operate with electricity and install the actuator according to regulations.