


Electric Control Ball Valve

Flow Direction

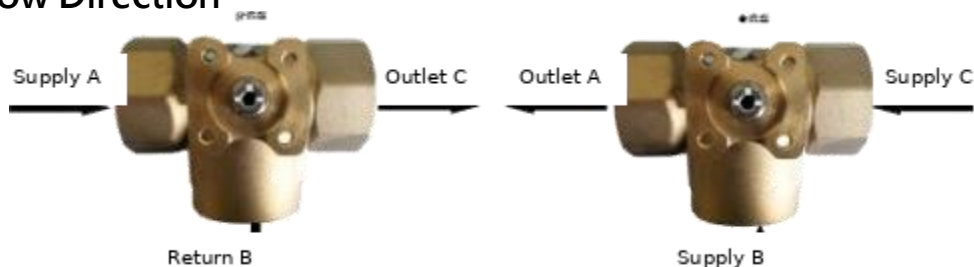

Threaded Ball Valve Installation

Step 1



Step 2



Step 3



Step 4



Flanged Ball Valve Installation

Step 1



Step 2



Step 3



Step 4



1. Trained/experienced personnel only. Disconnect power and install the actuator as instructed.
2. Contains electrical/electronic parts. Do not discard as general waste; follow local regulations.